



The compact and powerful  
multi-stage bagless filtration  
vacuum perfect for quick  
& easy home cleaning

**MULTI CYCLONE**  
**CycloVac**



**1400W**



## Instruction manual

Please read carefully before using  
& retain it for future reference.



• Bagless • Multi-cyclone filtration • Easy to clean • Compact •

## **IMPORTANT SAFETY INSTRUCTIONS**

When using any electrical appliance, basic precaution should always be followed, including the following:

 
### **READ ALL INSTRUCTIONS BEFORE USING THIS APPLIANCE**

**WARNING** - To reduce the risk of fire, electric shock, or injury:

1. Do not leave vacuum cleaner unattended when plugged in. Unplug from the electrical outlet when not in use and before servicing.
2. To reduce the risk of electric shock, do not use outdoors or on wet surfaces.
3. Use only as described in this manual. Use only the manufacturer's recommend attachments.
4. Do not use with a damaged cord or plug. If the vacuum cleaner is not working as it should, has been dropped, damaged, left outdoors or dropped into water, book it into a service center to check.
5. Do not pull or carry by the cord, use cord as a handle, close a door on the cord, or pull the cord around sharp edges or corners. Do not run the vacuum cleaner over the cord. Keep the cord away from heated surfaces.
6. Do not unplug by pulling on the cord. To unplug, grasp the plug, not the cord.
7. Do not handle the plug or the vacuum cleaner with wet hands.
8. Do not place any object into any openings on the vacuum cleaner. Do not use the vacuum cleaner when any opening is blocked. Keep free of dust, lint, hair and anything that may reduce the airflow.
9. Keep hair, loose clothing, fingers and all parts of body away from openings and moving parts.
10. Turn all controls off before unplugging.
11. Use extra care when cleaning on stairs.
12. Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where it may be present.
13. Hold the plug when rewinding onto the cord reel. Do not allow the plug to whip the vacuum when rewinding.
14. Unplug the vacuum before connecting the hose.
15. Do not pick up anything that is burning or smoking such as cigarettes, matches, or hot ashes.
16. Do not use without the filters in place.
17. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
18. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
19. Children should be supervised to ensure that they do not play with the appliance.
20. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
21. Cleaning and user maintenance shall not be made by children without supervision.
22. This appliance is designed for household use only and only for dry vacuuming.

### **SAVE THESE INSTRUCTIONS!**

## COMPONENTS

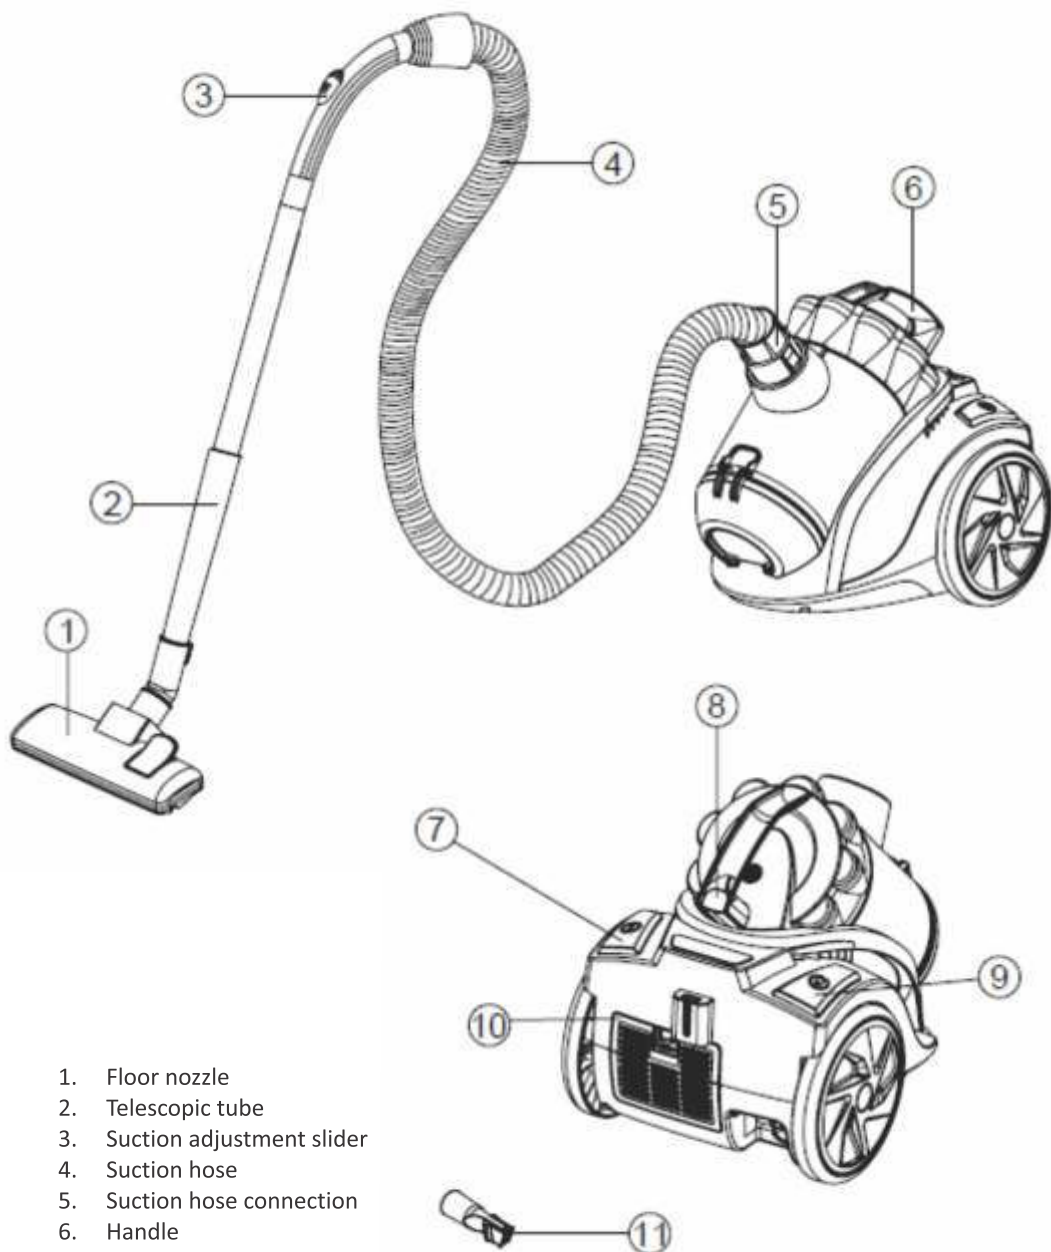


1. Floor nozzle
2. Telescopic tube
3. Suction adjustment slider
4. Suction hose
5. Suction hose connection
6. Handle
7. ON/OFF button
8. Release button
9. Cord rewind button
10. Cover the exhaust filter
11. 2-in-1 Crevice nozzle


## PREVENTION

 Switch the vacuum cleaner off immediately if any of the air intakes, attachments or pipes become blocked. Remove the blockages before using the vacuum cleaner again.

1. Never use the vacuum cleaner close to hot surfaces and do not suck up hot objects like cigarettes or ash.

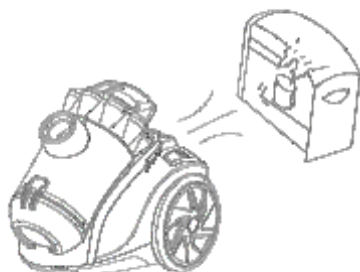

 
2. Only insert the plug into the electrical socket with dry hands.

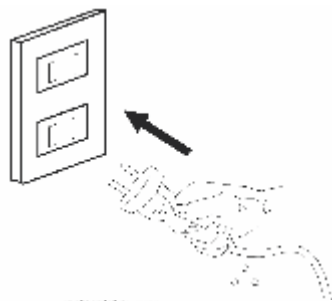

3. Remove large, sharp objects from the floor before using the vacuum cleaner to prevent damage to it.



 
4. Do not pull the cord to remove the plug but rather grasp the plug.

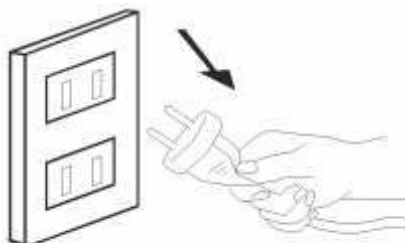

**PREPARING THE VACUUM CLEANER**


**Fitting the hose**

 Fit the hose onto the vacuum cleaner by inserting and pressing it into the suction hole until the retaining clips, clips securely into place. To remove the hose, press the clips on the hose to release it from the suction hole and pull it out.

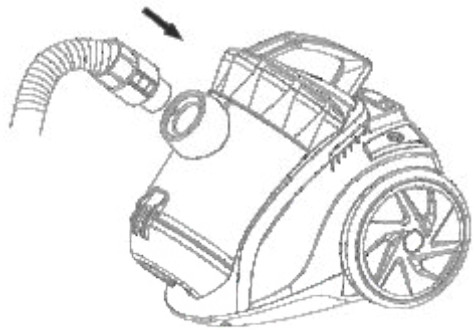

**Multi-floor attachment**

 The multi-floor attachment has two settings. When cleaning hard surfaces, the nozzle's brushes should be extended. When cleaning carpets and mats, the brushes should be retracted into the nozzle. Press the button on the brush to switch between the two settings.

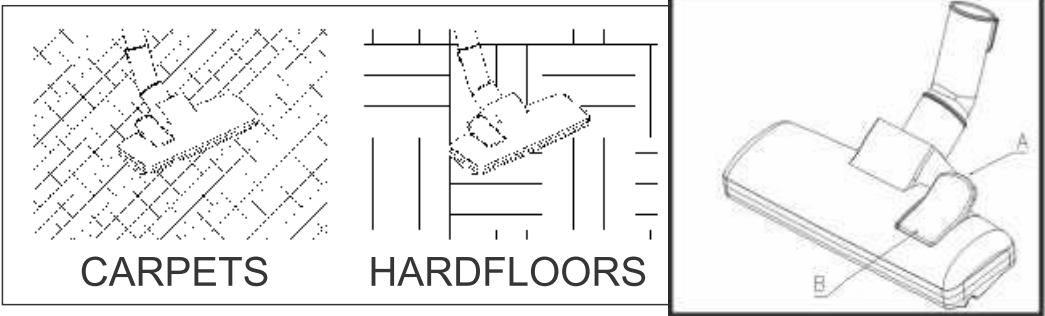

**2-in-1 Crevice nozzle**

To get into hard-to-reach places. Flip the brush as needed.



 
## USING THE VACUUM CLEANER

### Vacuum cleaning

Before using the vacuum cleaner, first roll out a sufficient length of the electric cord and plug the plug into the electrical outlet. The yellow mark on the cord is the maximum length that must not be exceeded.

To switch the device on, press the foot pe button  with your hand or foot.

To rewind the electrical cord, press the button marked with  with one hand and guide the cable with the other hand to ensure that it does not whip the vacuum cleaner and cause damage.

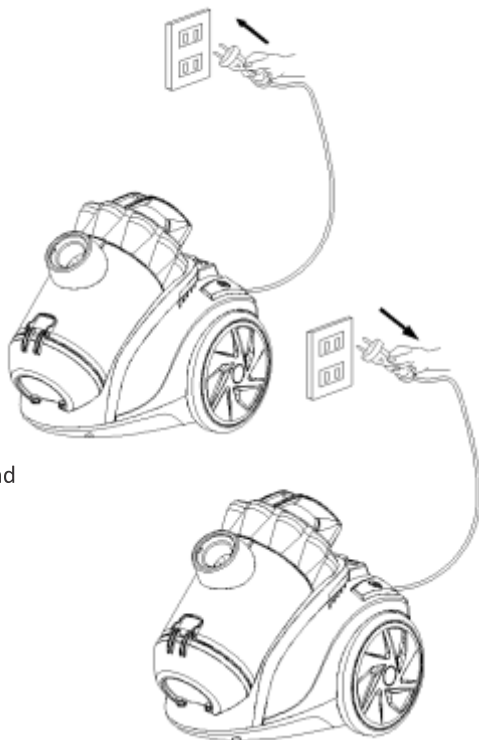

An increased pitch in the sound of the vacuum and reduction in suction power, means that either one of the pipes/attachments is blocked or one of the filters is blocked. Discontinue use and clean the obstruction/filters.


### Emptying the dust container

 Empty the dust container regularly, when the dust level reaches the "MAX" level or if the suction power has dropped.


1. Switch off the vacuum cleaner and disconnect the plug from the mains. Remember to pull on the plug and not the cord.

2. Release the dust container by pressing down the release button.

3. Lift the dust container forwards from the vacuum cleaner.

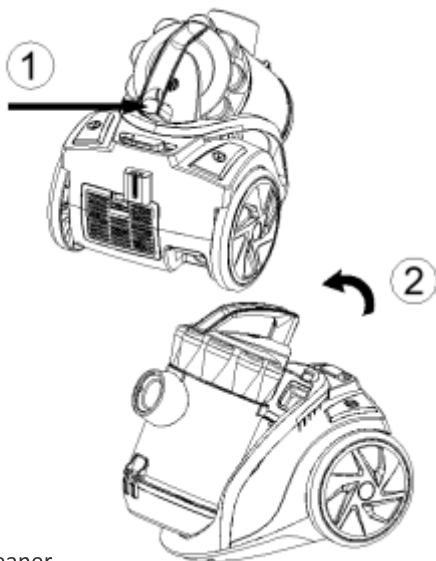


 4. When emptying the dust container, hold it close over a dustbin.
5. Press the open button to release the dust into the dustbin.
6. Carefully knock the remaining dust out of the container.
7. Close the base.
8. Replace the dust container onto the vacuum cleaner.
9. Make sure that the dust container is securely seated.

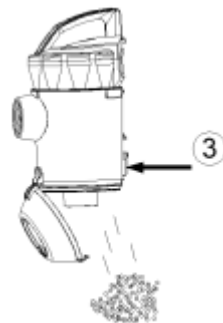

### **Cleaning the micro-particle filter**

 1. Turn off and unplug the vacuum cleaner.
2. Remove the dust container.
3. Open the dust container cover and remove the filter.
4. Hold the micro-particle filter over a dustbin. Gently knock over a dustbin.
5. Replace the micro-particle filter back into its receptacle.
6. Replace the filter cover by lining up the marks and turn to lock.
7. Replace the dust container onto the vacuum cleaner.
8. Check whether the dust container is securely seated.


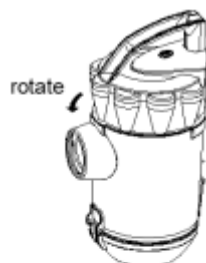


**IMPORTANT!** Never use the vacuum cleaner without a motor filter.

### **Cleaning the exhaust air filter**

  The exhaust air filter cleans the air before it leaves the vacuum cleaner. You can clean the exhaust air filter as follows:

1. Switch off the vacuum cleaner and disconnect the plug from the mains by holding the plug and not pulling on the cord.
2. Remove the dust container .
3. Open the exhaust filter cover.
4. Rinse the filter under cold running water and allow dry for at least 24 hours. (See further note on back page)
5. Put the exhaust air filter back into
6. Close the exhaust filter cover.

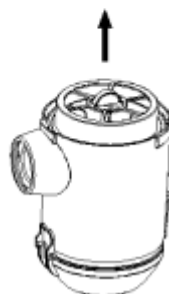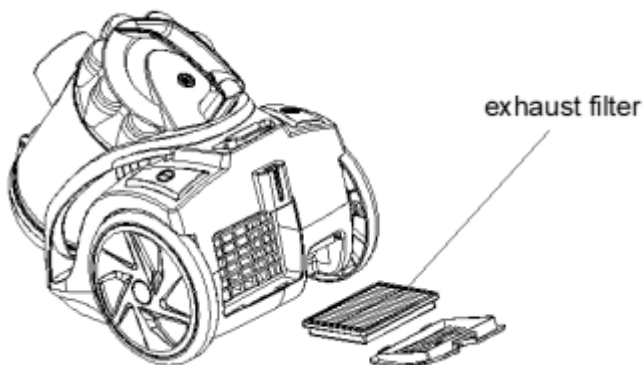

**IMPORTANT! TO GET THE BEST PERFORMANCE AND TO  
EXTEND THE LIFE OF THIS APPLIANCE, CLEAN THE  
FILTERS REGULARLY.**

To clean the filters, remove the motor filter, micro particle filter and screen. Wash in cold water under a running tap with some mild detergent, rinse well and completely air-dry before replacing.

Do not replace the filters if it is not completely dry.

The machine is fitted with a Thermo Cut-out which will automatically switch off the appliance if the filters are dirty or if the machine has been used for an extended period. If the machine cuts out, please clean the filters and let the machine cool down before using again.

**The guarantee:**

Verimark provides a quality guarantee of 2 years after date of sale.

The guarantee only covers defects in material or workmanship.

The repairs under guarantee may only be carried out by an authorized service centre.

When making a claim under the warranty, the original proof of purchase (with purchase date) must be submitted.

The guarantee will not apply in cases of:

- Normal wear and tear
- Incorrect use, e.g. overloading of the appliance, use of non-approved accessories
- Use of force or damage caused by external influences
- Damage caused by not following the directions of the user manual, e.g. connection to an unsuitable mains supply or non-compliance with the installation instructions
- Partially or completely dismantled appliances



**Correct Disposal of this product**

This marking indicates that this product should not be disposed with other household waste throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmentally safe recycling.



Manufactured for and distributed by:

Verimark (Pty) Ltd

P.O. Box 78260, Sandton, 2146

Tel: 0860 005 005

[www.verimark.co.za](http://www.verimark.co.za)