



PLUS II
HYDROVAC

**The ultimate turbo
power wet & dry
water filtration vac**



The advanced 4 stage cyclonic water filtration system with turbo cleaning power, perfect for pet owners.

**1600W
MAX**



• Bagless • 4 Stage filtration • Easy to clean • 22.7 kPa Adjustable suction •

Instruction manual

Please read this manual carefully before using & retain for future reference.
Do not operate the appliance without water or water at the correct level.

Note: Pictures inside manual may differ from actual unit.



IMPORTANT SAFETY INSTRUCTIONS/PRECAUTIONS

When using your Genesis Hydrovac Plus, basic safety precautions should always be followed, including the following :

1. This appliance is intended **for normal household use only.**
2. Use only as described in this manual. Use only manufacturers recommended attachments.
3. Do not immerse any part of the cleaner into water or other liquids.
4. Never yank the cord to disconnect it from an outlet; instead, grasp the plug and pull to disconnect
5. Do not allow cord to touch hot surfaces . Use extra care when cleaning on stairs. Do not run appliance over the cord. Do not operate the cleaner with a damaged cord or plug. Never allow the machine to fall over with water inside.
6. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
7. Keep hair, loose clothing, fingers and all parts of body away from openings and moving parts.
8. Do not use this appliance to pick up flammable or combustible liquids such as gasoline.
9. Do not pick up anything that is burning or smoking such as cigarettes, matches or hot ashes.
10. This unit should not be used to pick up liquids from containers, sinks, tubs, etc.
11. If the supply cord is damaged, it must be repaired by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
12. Please turn off all controls as applicable before unplugging from the electrical outlet. Do not leave the cleaner plugged in when unattended. Unplug the electrical cord when not in use and before servicing. Do not unplug by pulling on cord instead to grasp the plug, not the cord. Do not touch the plug or vacuum with wet hands.
13. Store your appliance indoors in a cool, dry area.
14. **NB: Never store the vacuum cleaner with water inside. Empty after every use.**
15. **Never allow the water level to increase above the MAX water level indicator.**

ATTACHMENTS



1. HIGH-EFFICIENCY MULTI SURFACE TOOL

Use it to clean carpets and hardfloors effortlessly. Easy change dual foot selectors on head.



2. TURBO BRUSH

With its rotating brush, it removes stubborn dirt and pet hair from carpets.



3. UPHOLSTERY TOOL

Use it on your upholstery, car seats and even curtains.



4. EXTENSION PIPE

By simply pressing the release button, it can be adjusted to the perfect length.



5. DUSTING BRUSH

Use this brush to dust e.g. picture frames or use to prevent scratching e.g. on a car's dash displays.



6. CREVICE TOOL

Use it to reach into tight, hard to reach areas.



7. WET ATTACHMENT

Perfectly designed to pick up wet spills from the floor with ease.



PARTS DESCRIPTION:

PLUS
HYDROVAC



IMPORTANT NOTES:

ALWAYS USE THE APPLIANCE WITH WATER IN THE TANK AND AT THE CORRECT LEVEL.

NEVER LEAVE DIRTY WATER INSIDE THE TANK. EMPTY AFTER EVERY USE.

REGULARLY CLEAN THE FILTERS AND LET IT DRY COMPLETELY BEFORE RE-INSTALLING.

THIS APPLIANCE WAS DESIGNED FOR HOME USE ONLY.

OPERATING INSTRUCTIONS:



Connect the hose to the tank

Insert the hose into the suction hole and turn it clockwise.
(Fig. 1)



Fig. 1

Connecting the hose, tubes and brushes

- Press the spring loaded lock button to extend the stainless pipe. (Fig. 2)
- Connect the hose to the stainless steel pipe. (Fig. 3)
- Connect the stainless steel pipe to the attachments. (Fig. 4)



Fig. 2



Fig. 3

Attention: Use the multi-surface floor tool only for dry vacuuming and the water brush only for wet vacuuming.



Fig. 4

Air inlet pipe assembly:

Assemble the air inlet pipe of the water filtration first before using. (Fig. 5)

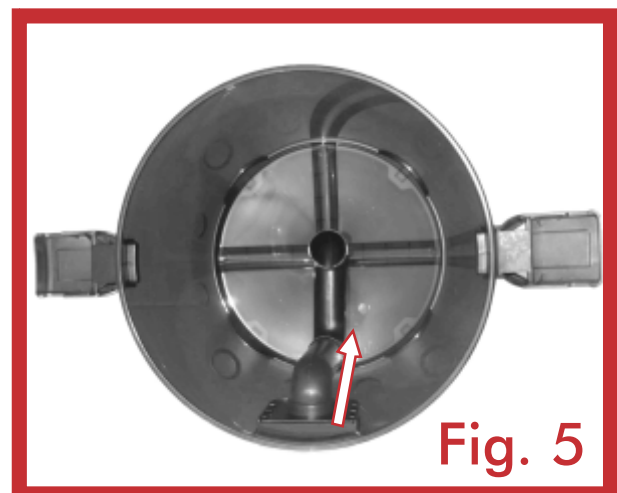


Fig. 5

OPERATING INSTRUCTIONS (cont.):

Add water:

Add water to the Max water level (Fig. 6). Do not exceed the MAX water level or it may be pulled into the motor causing damage.



Fig. 6

Micro Particle filter assembly:

Rotate the micro particle filter base clockwise to lock it in. (Fig. 7)



Fig. 7

Replace the water stopper plate:

Place the water stopper plate onto the water stopper and rotate clockwise to lock into place. (Fig. 8)



Fig. 8

OPERATING INSTRUCTIONS (cont.):


Side clips:

After setting the head onto the water tank, use the clips to securely lock it to the base (Fig. 9)



Blower function:

Insert the hose into the blower hole and turn clockwise to secure. (Fig. 10)

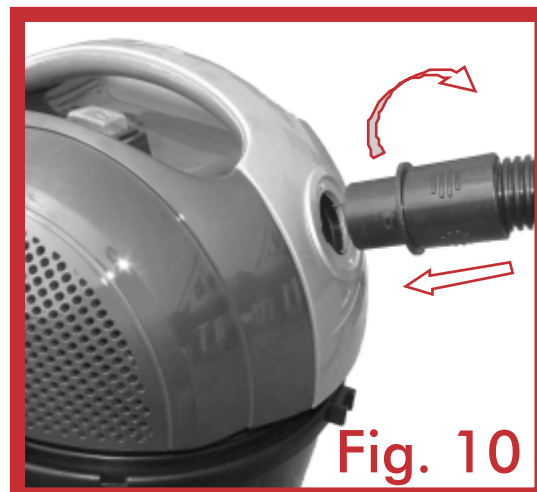

OPERATION:

On/Off:

Press the on/off button (Fig. 11)



OPERATION:

Speed control:

Adjust the speed to your requirements. (Fig. 12)

Please note that the knob can be turned past the MAX and MIN level. The indicator's purpose is to show in which direction the suction power increases and decreases.






Air flow:

Adjust the airflow button to control the suction power. (Fig. 13)




Multi surface floor tool: CARPETS

Press the button with the smooth icon downwards. It is now suitable for carpets as per Fig.14 with the brushes retracted.

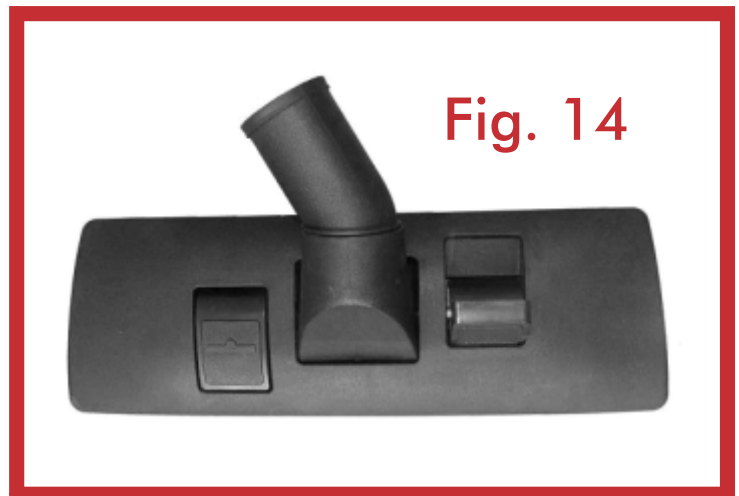

Multi surface floor tool: HARDFLOORS

Press the button with the brush icon downwards. It is now suitable for hardfloors as per Fig.15 with the brushes extended.

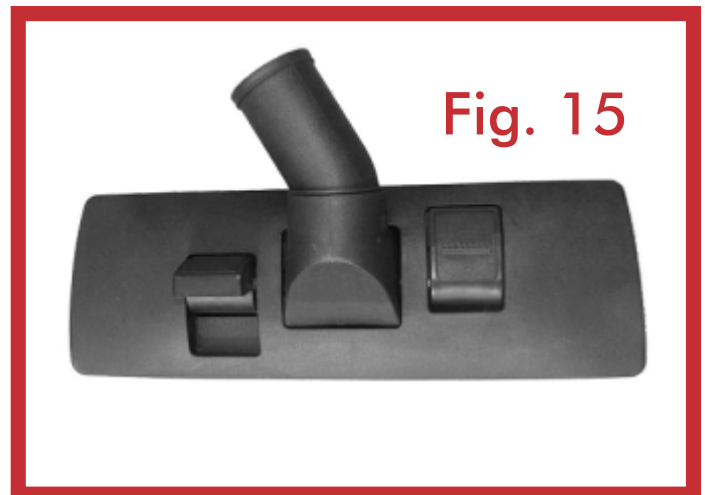

MICRO PARTICLE FILTER CLEANING

Micro particle filter cleaning:

- Clean the micro particle filter regularly - especially when there is noticeable loss in suction power.
- Wash the micro particle filter under a running tap and let dry completely before replacing. It must be bone-dry before replacing otherwise it will clog up very quickly again and may become unusable. Allow several hours to dry.
- Rotate the micro particle filter base anti-clockwise to remove it. Rotate it clockwise to replace.

Guarantee

This appliance is guaranteed to be free from material or manufacturing defects for a period of 2 years from date of purchase. The motor is guaranteed to be free from material or manufacturing defects for a period of 3 years from date of purchase. In case of a manufacturing or material defect, we will gladly repair the item free of charge, provided the item is returned with the corresponding proof of purchase.

The guarantee will be void if;

- The defect in the machine was caused by inappropriate use, over-loading or used in any way other than the appropriate operation methods described in this manual.
- If there has been any technical interference, modification or service done by an unauthorized service person.
- If the item has been opened by the customer.
- If the item has been dropped.
- If no proof of purchase can be produced at the time of the claim.

Refunds

No refunds will be granted on this machine if;

- After 15 days from purchase date
- If no proof of purchase can be produced
- If the machine is not in it's original condition
- If the machine is not complete with all the parts and packaging as sold
- If the machine has not been used in accordance with this manual
- If the machine is not returned with the original packaging
- If the machine is scratched or damaged by the customer in any way
- If consumables were used by the customer and there is no reasonable proof that a manufacturing or material defect in the machine, the customer should pay for the used consumables.



IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH EC DIRECTIVE 200/96/EC

At the end of its working life, the product must not be disposed of as urban waste.

It must be taken to a special local authority differentiated waste collection center or to a dealer providing this service.

Disposing of a household appliance separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal and enables the constituent material to be recovered to obtain significant saving in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.

HydroVac^{PLUS}

4 STAGE HYDRO-CYCLONIC FILTRATION SYSTEM

1

Water filtration

First, all the dirt and impurities are filtered in a high-efficiency water filter.

3

Micro-Particle filter

This is a high-efficiency, washable filter that removes more than 99.9% of the dirt, ^{**}dust and impurities found in common household dust.

2


Cyclonic filtration

The air then passes through a cyclonic system which ensures that the suction power is enhanced and maintained.

4

Sponge filters

At the end of the 4 stage filtration, 2 sponge filters complete the cycle. This whole system ensures that only clean, fresh air is released from your vacuum.

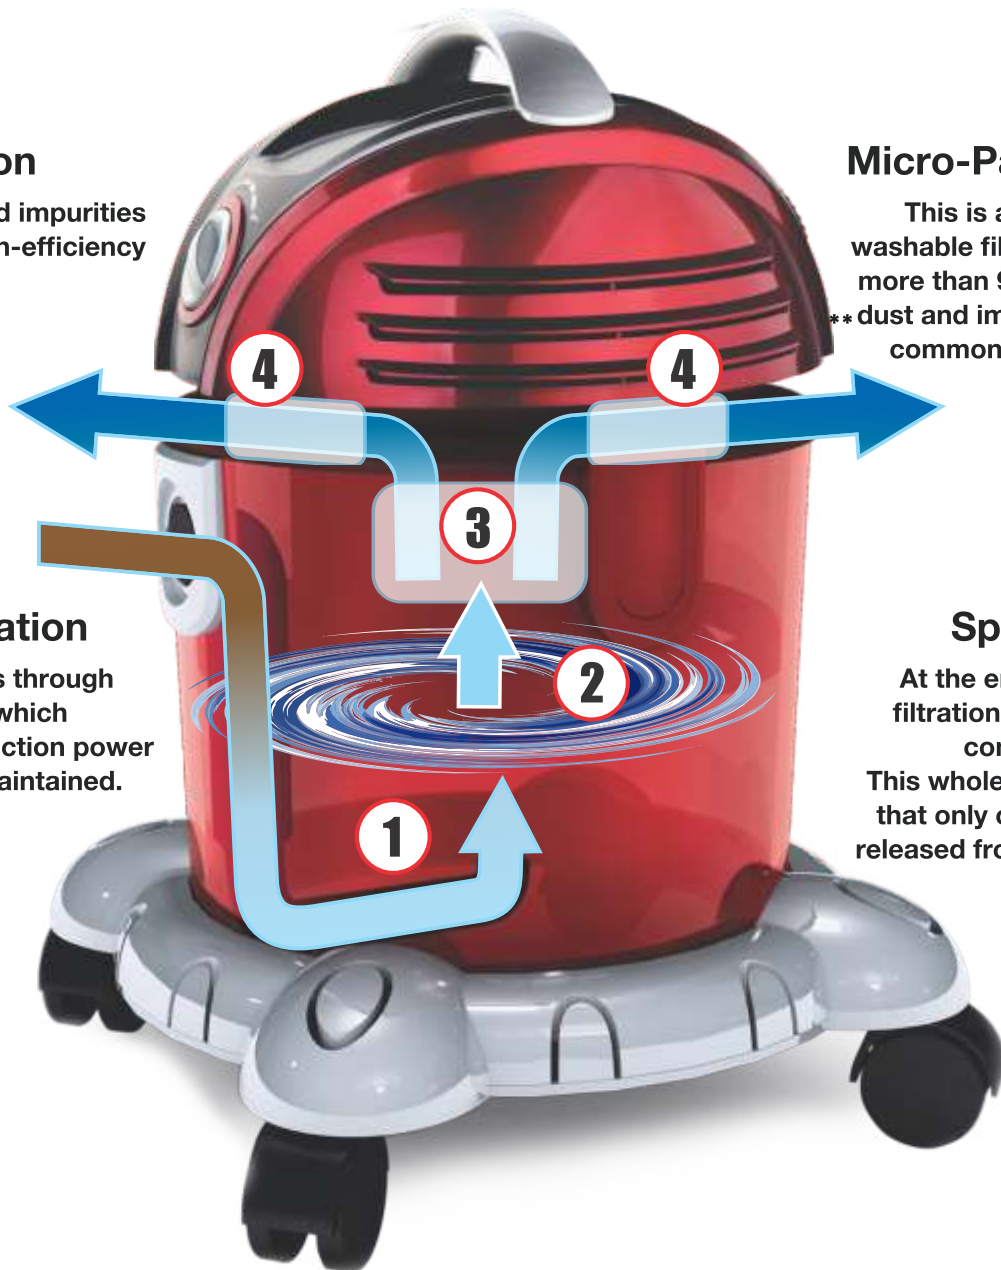

****Found in common household dust**

HydroVac ^{PLUS}



No dust bags needed



Easy to empty



Removes dust mites

ATTACHMENTS



1. Multi surface tool
2. Wet attachment

3. Crevice tool
4. Non-scratch brush

5. Turbo brush
6. Upholstery tool

7. Micro-Particle filter
8. Telescopic handle



Manufactured for and distributed by:
Verimark (Pty) Ltd
P.O. Box 78260, Sandton, 2146
Tel: 0860 005 005
www.verimark.co.za