



600W CYCLONE MINIMAX

**Patented filtration system
& incredible suction power**

The powerful 2-in-1 vacuum makes
light work of any cleaning job in
the house



Instruction manual



To prevent accidents and/or machine
damage, read these instructions before use.
RETAIN FOR FUTURE REFERENCE

1. PRODUCT AND USER SAFETY

When using any electrical appliance, basic safety precautions should always be followed including the following:

- Read the instruction manual carefully before use!
- Keep this instruction manual for future reference.
- Children should be supervised to ensure that they do not play with the appliance.
- This appliance is designed for domestic use only.
- Do not pull on the connection cord, but rather on the plug, to remove the appliance adaptor from the mains.
- Do not use outdoors.
- Do not leave the appliance unattended when it is switched on as this may be dangerous.
- Don't pick up large or sharp items such as broken glass.
- Don't pick up inflammable or explosive substances such as gasoline or alcohol as it may lead to injury or a fire hazard.
- Check the device and connections regularly for visible damage.
- The device must not be used if the housing is damaged or other damage is present.
- Never attempt to open the device yourself or to replace the connecting cable. Always have repairs to the device done by a specialist, authorised workshop.
- There is considerable danger to the user if repairs are faulty.
- Pay attention to where the cable is to prevent any danger of tripping.
- Keep the cable away from heated surfaces (e.g. cookers and other hot surfaces).
- Do not touch the plug, cable or appliance with wet hands.
- Do not point the vacuum cleaner at persons or animals when in operation.
- Only use the device with the accessories supplied.
- Please keep these instructions in a safe place.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- Never vacuum up liquids of any kind.
- Take extra care when vacuuming stairs.
- Always grasp the plug, not the cable when removing it from the mains outlet.
- Do not place any objects into the openings on the appliance.
- Do not pick up anything burning or smoking.
- Always switch off all the controls before unplugging.
- Never use without the filters in place.


SAVE THESE INSTRUCTIONS

When using this appliance, do not cover the electrical cord with throw rugs, runners or similar coverings. Do not route the cord underneath furniture or appliances. Place the cord away from high traffic areas or where it could be tripped over.

Always unplug when not in use and wrap the cord on the provided tabs on the machine.

2. PARTS DESCRIPTION

1. Hand grip
2. Power cord hook
3. Separation button
4. Power cord
5. ON/OFF button
6. Main body
7. Dust cup button
8. Filter
9. Dust cup
10. Non-scratch brush
11. Multi-floor brush
12. Cyclone separator
13. Crevice nozzle
14. Brush clip

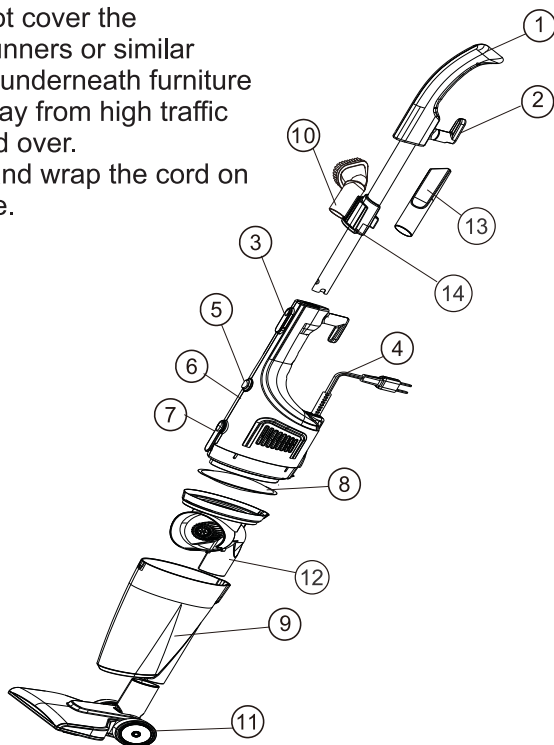

3. HOW TO USE

1. As an upright vacuum cleaner

Please ensure that the filter is fitted inside the dust cup and that all parts are fitted together securely. Make sure that the machine is switched OFF before plugging it into the mains outlet.

(1) Install the hand grip: Insert the hand grip into the main body (refer to Fig. 1)

When you insert the hand grip, make sure to insert it the correct way around. Turn it a little to the left or to the right to get it to click into place. You can also remove the hand grip by pressing the separation button.

WARNING: Never place excessive force on the handle or the separation button as this may damage the appliance.

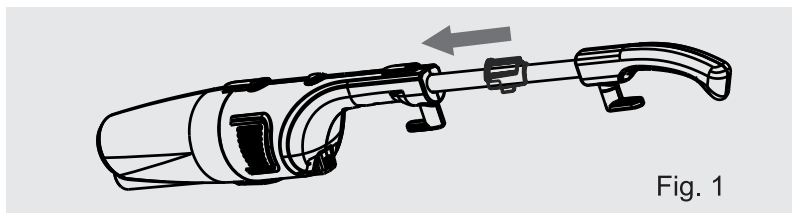


Fig. 1

(2) Insert the plug into the electrical outlet.

(3) Turn on the switch.



Notice: Unwind the entire power cord and make sure that it is not entangled on anything.

(4) Move the multi floor attachment on the floor back-and-forth to clean it (Not sideways as this may damage the floor)

(5) Please turn the power off and unplug after every use.

2. As a handheld vacuum cleaner

(1) Remove the handgrip and the multi-floor attachment. Ensure that there is a filter installed and that the power switch is in the "OFF" position before plugging the cord into the electrical outlet. Insert the crevice nozzle or the non-scratch brush as needed (Fig. 2)

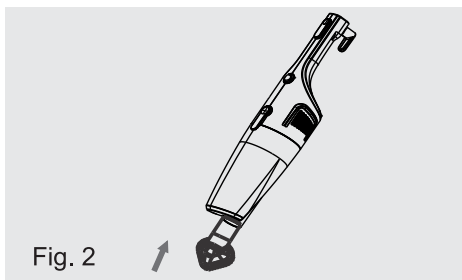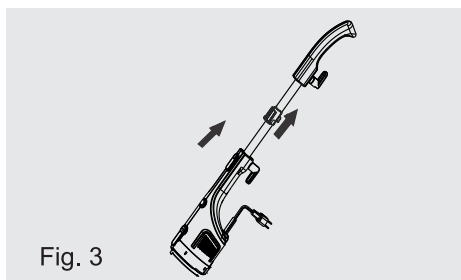

Remove the handgrip: Push the separation button and pull the handgrip out (Refer to Fig. 3).

(2) Insert the plug into the electrical outlet.

(3) Turn the switch ON.

(4) Move the brush or crevice nozzle along the surface to be cleaned.

(5) Please switch off and unplug the machine after every use.



3. How to clean the appliance

Clean the vacuum cleaner often/as needed or the vacuum could be damaged or loss of suction power.

(1) Press the dust cup button to release the dust cup (Fig. 4)

(2) Remove the filter (Fig. 5).


(3) Remove the cyclone separator from the dust cup (Fig. 6).

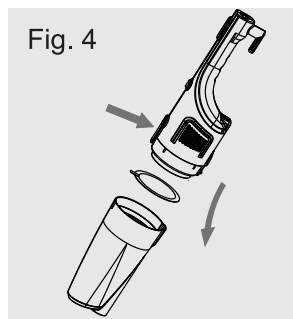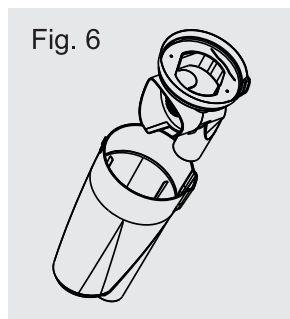

- (4) Empty the dust cup.
- (5) Remove the dust on the filter. You can either shake out excess dust, or in severe cases, the filter may be washed and air dried for at least 24 hours before replacing / using again. Using a wet filter will damage the filter permanently.

Maintenance

- (1) The main unit and the handgrip can be wiped off with a damp cloth (not soaked). The dust cup and the nozzles can be washed in water. Note: Never wash any part with alcohol or gasoline.
- (2) Filter: Never machine wash the filter. The filter may be washed with clean water and air dried for at least 24 hours before replacing / using again. Using a wet filter will damage the filter permanently.
- (3) Always remember to replace all the parts including the filter after cleaning before using the appliance again (Refer to Fig. 7).

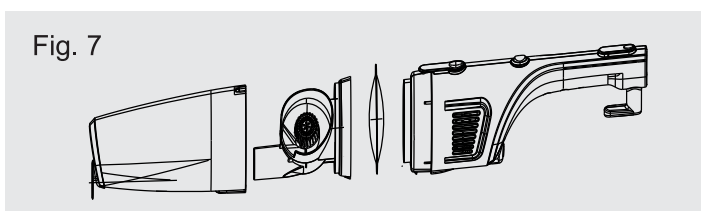

Any other servicing should be performed by an authorised service representative.

4.TROUBLESHOOTING


Please check the following before contacting your service centre:

Problem	Possible causes	Solution
The machine's motor does not work	Check if the plug is securely in the electrical outlet. Check is there is power at the outlet. Check if the switch is on.	Insert the plug into the outlet again. Ensure the outley is operational. Switch on.
The suction power is reduced	Check if the air inlet is blocked. Check if the dust cup is full of dust. Check if the filter is blocked.	Remove the blockage. Empty the dust cup. Clean the filter.

5. SPECIFICATIONS

Rated voltage:	220-240V
Rated frequency:	50Hz
Rated power:	600W
Noise:	≤ 80 dB
Dust cup capacity:	1.2 L


6. CIRCUIT DIAGRAM

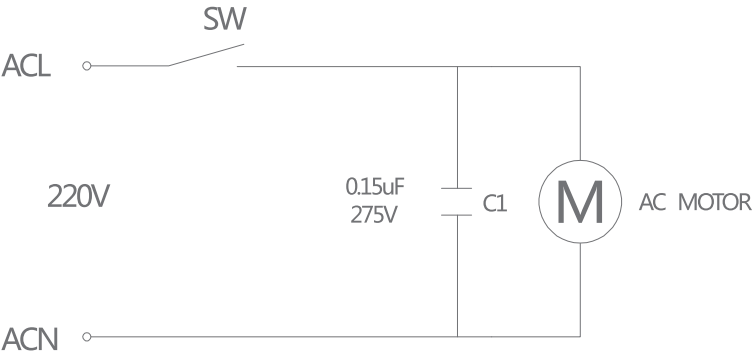

SERVICING OF DOUBLE INSULATED APPLIANCES

This section is only for service centres

 A double-insulated appliance is marked with one or more of the following:
The words “DOUBLE INSULATED” or “DOUBLE INSULATION” or the below double insulation symbol:

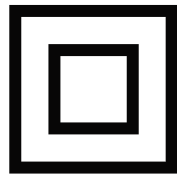

In a double-insulated appliance, two systems of insulation are provided instead of grounding. No grounding means that the appliance does not need to be grounded nor should grounding be added to the appliance. Servicing a double-insulated appliance requires extreme care and knowledge of the system and should only be done by qualified service personnel. Replacement parts for a double-insulated appliance must be identical to the parts they replace.

WARNING:
DO NOT IMMERSE ANY PART OF
THE APPLIANCE IN WATER

Dispose of the packaging in a responsible manner.

GUARANTEE

This appliance is guaranteed to be free from material or manufacturing defects for a period of 1 year from date of purchase. In case a manufacturing or material defect occurs, we will gladly repair the item free of charge, provided the item is returned with the corresponding proof of purchase.

The guarantee will be void if;

- The defect in the machine was caused by inappropriate use, over-loading or used in any way other than the appropriate operation methods described in this manual.
- If there has been any technical interference, modification or service done by an unauthorized service person.
- If the item has been opened by the customer.
- If the item has been dropped.
- If no proof of purchase can be produced at the time of the claim.

REFUNDS

No refunds will be granted on this machine;

- After 15 days from purchase date.
- If no proof of purchase can be produced.
- If the machine is not in its original condition.
- If the machine is not returned complete with all the parts as sold.
- If the machine has not been used in accordance with this manual.
- If the machine is not returned with the original packaging.
- If the machine is scratched or damaged by the customer in any way.
- If consumables were used by the customer and there is no reasonable proof that a manufacturing or material defect in the machine, the customer should pay for the used consumables.

SERVICING OR REPAIRS

If the product malfunctions or is damaged, all inspections and repairs must be carried out by a qualified electrician or technician .

DISPOSAL

If the device is to be disposed, do so in a responsible manner. It should always be taken to a local authority recycling centre.

If you cannot disassemble the product yourself the local authority recycling centre will dispose of the product for you in an environmentally friendly manner.



Manufactured for and distributed by:
Verimark (Pty) Ltd
P.O. Box 78260, Sandton, 2146
Tel: 0860 005 005
www.verimark.co.za