



DIGITAL **WIDE 2-SLICE**
SMART TOASTER
INSTRUCTION MANUAL



Please read instructions before use
and keep this manual for future reference
- For Indoor, Household Use Only -




IMPORTANT INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USE - FOR HOUSEHOLD USE ONLY

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions carefully before use.
2. Ensure that your outlet voltage matches the voltage stated on the toaster's rating label.
3. The outer surface may become hot during operation.
4. Do not touch hot surfaces, especially the metal top area. Use handles or knobs only.
5. To prevent electrical shock, do not immerse the cord, plug, or any part of the toaster in water or other liquids.
6. Close supervision is required when the appliance is used by or near children.
7. Unplug the appliance when not in use and before cleaning. Allow it to cool before removing or attaching parts.
8. Allow the appliance to cool completely before cleaning or storing.
9. Do not operate the appliance if the cord or plug is damaged, or if it is malfunctioning. If the power cord is damaged, it must be replaced by the manufacturer, a service agent, or a qualified person.
10. Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
11. This appliance can be used by children aged 8 years and older, and by persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, if they have received supervision or instruction on how to use the appliance safely and understand the associated risks. Children should not play with the appliance. Cleaning and user maintenance should only be performed by children aged 8 or older and under supervision. Keep the appliance and its cord out of the reach of children under 8 years old.
12. Do not place the appliance on or near a hot gas or electric burner, or inside a heated oven.
13. Use the appliance only for its intended purpose.
14. Do not insert oversized food, metal foil packages, or utensils into the toaster, as this may cause fire / electric shock.
15. Bread may burn; therefore, do not use the toaster near or below curtains or other flammable materials. Always monitor the appliance during use.
16. The use of accessories not recommended by the manufacturer may cause injury.
17. Place the appliance on a stable, level surface.
18. Do not attempt to remove stuck food while the toaster is operating.
19. The appliance is not intended to be operated using an external timer or remote-control system.
20. Remove bread carefully after toasting to avoid injury.
21. This appliance is fitted with a grounded plug. Ensure that your wall outlet is properly earthed.
22. Keep the appliance and its cord out of reach of children under 8 years of age.
23. Do not use the appliance outdoors.
24. This appliance is intended for household use only.
25. Keep these instructions for future reference.

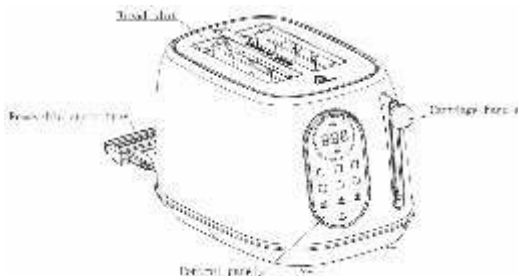

PRODUCT INTRODUCTION

Control Panel Functions:

1. Time Adjustment

Press “+10” to increase time by 10 seconds, or “-10” to decrease time by 10 seconds.

2. Browning Dial

Choose from 6 browning levels (light to dark).

3. Reheat Button

Reheats bread without additional browning.

4. Cancel Button

Press and hold to cancel the toasting process.

5. Bagel Button


Designed for toasting bagels and thicker bread.

6. Defrost Button

Defrosts and toasts frozen bread.

7. Display Screen

Shows the remaining toasting time.

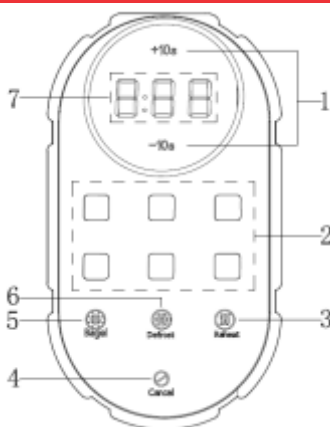

FOR FIRST USE

The toaster may emit a slight odor during initial use due to manufacturing residue. This is normal and will disappear after a few uses. Before toasting bread for the first time, operate the toaster without bread.

OPERATION

- | | |
|---|---|
| <ol style="list-style-type: none">1. Insert up to two slices of regular bread into the slots.2. Plug the appliance into a power outlet.3. Press the carriage handle down until it locks in place. Select your desired browning level.4. The toaster will begin operating, and the indicator light will turn on.5. When toasting is complete, the bread will pop up automatically. | Notes: <ul style="list-style-type: none">• The toast handle will only lock when the toaster is plugged in.• Toasting may differ between one slice and two slices.• Default setting is Level 3. |
|---|---|

ADDITIONAL FUNCTIONS

- **Cancel:** Press and hold the cancel button for 1–3 seconds to stop operation.
- **Defrost:** Use for frozen bread before toasting.
- **Reheat:** Reheats previously toasted bread without browning.
- **Bagel:** Adds extra time for thicker bread.

FOR FIRST USE

1. Remove all packaging before use.
2. If smoke appears, press CANCEL immediately.
3. Avoid toasting food with dripping ingredients (e.g., butter).
4. Always unplug before removing stuck bread.
5. Only use standard bread slices in the slots.
6. Wait at least 30 seconds between toasting cycles for best results.

CLEANING AND MAINTENANCE

1. Unplug the toaster before cleaning.
2. Wipe the exterior with a soft, dry cloth once cooled.
3. Remove and empty the crumb tray regularly (at least once a week if used often).
4. Ensure the crumb tray is properly reinserted before use.
5. Store the cord neatly underneath the toaster when not in use.

GUARANTEE

This appliance (excluding consumables and attachments) is guaranteed to be free from material or manufacturing defects for a period of 1 year from date of purchase. In case a manufacturing or material defect occurs, we will gladly repair the item free of charge, provided the item is returned with the corresponding proof of purchase.

The guarantee will be void if;

- The defect in the appliance was caused by inappropriate use, over-loading or used in any way other than the appropriate operation methods described in this manual.
- If there has been any technical interference, modification or service done by an unauthorized service person.
- If the item has been opened by the customer.
- If the item has been dropped.
- If no proof of purchase can be produced at the time of the claim.

REFUNDS

No refunds will be granted on this appliance;

- After 15 days from purchase date.
- If no proof of purchase can be produced.
- If the appliance is not in its original condition.
- If the appliance is not returned complete with all the parts as sold.
- If the appliance has not been used in accordance with this manual.
- If the appliance is not returned with the original packaging.
- If the appliance is scratched or damaged by the customer in any way.



Manufactured for and distributed by:
Verimark (Pty) Ltd
P.O. Box 78260, Sandton, 2146
Tel: 0860 005 005
www.verimark.co.za



DISPOSAL: If the device is to be disposed, do so in a responsible manner. It should always be taken to a local authority recycling centre or the retailer where you bought it and not be discarded with general waste.

If you cannot disassemble the product yourself the local authority recycling centre will dispose of the product for you in an environmentally friendly manner.

Dispose of the packaging in a responsible manner.