GENESIS

DURAVAC
COMMERCIAL 30L

The ideal commercial size wet & dry vacuum now with unique anti-clog filter system

MULTI-PURPOSE WET & DRY

QUALITY 2 YEAR GUARANTEE

QUALITY · INNOVATION · SERVICE OVER 42 YEARS



AS SEEN ON TV

•10m cord & 2.5m hose • Wet & dry vac •30L Dust tank • 800 Hour double-stage motor•

Instruction manual

WARNING To prevent accidents and/or machine damage, read these instructions before use.
RETAIN FOR FUTURE REFERENCE

VERIMARK

SAFETY INSTRUCTIONS

When using your Genesis Duravac Commercial 30L, basic safety precautions should always be followed, including the following:


- **READ ALL THE INSTRUCTIONS BEFORE USING THE APPLIANCE.**
- Use only as described in this manual. Use only manufacturers recommended attachments.
- Do not immerse any part of the cleaner into water or other liquids.
- Never yank the cord to disconnect it from an outlet; instead, grasp the plug and pull to disconnect.
- Do not allow the cord to touch hot surfaces . Use extra care when cleaning on stairs. Do not run appliance over the cord. Do not operate the cleaner with a damaged cord or plug.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Keep hair, loose clothing, fingers and all parts of body away form openings and moving parts and never stick foreign objects into the openings.
- Do not use this appliance to pick up flammable or combustible liquids such as petrol.
- Do not pick up anything that is burning or smoking such as cigarettes, matches or hot ashes.
- This unit should not be used to pick up liquids from containers, sinks, tubs, etc.
- If the supply cord is damaged, it must be repaired by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- Please turn off all controls as applicable before unplugging from the electrical outlet. Do not leave the cleaner plugged in when unattended. Unplug the electrical cord when not in use and before servicing. Do not unplug by pulling on cord instead to grasp the plug, not the cord. Do not touch plug or vacuum with wet hands.
- Store your appliance indoors in a cool, dry area.
- Do not block the air outlet as this will cause overheating of the motor.
- Never use the machine without the correct filters installed.
- Never clean the filters with chemicals and never use hot air drying or air blower equipment to dry the filters.
- Move the machine with the handle on top of the motor and not by yanking the cord or the hose.
- If any part of the product is damaged, discontinue use and send to an authorised service center for repair.
- NB: Never store the vacuum cleaner with water inside. Empty after every use.
- Stop using the machine immediately if the water level activates the suction float .

DESCRIPTION OF SPECIAL FEATURES


ON/OFF SWITCH



BLOWER OPEN/ CLOSE (behind)

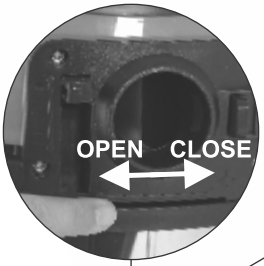


DUST RELEASE BUTTON (behind)

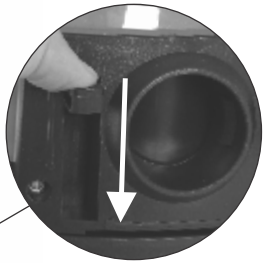


Pull down and release

MOTOR HEAD CLAMPS

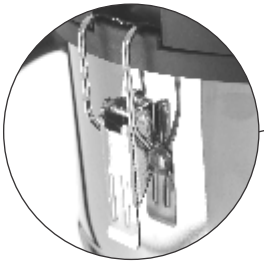

CABLE HOOK



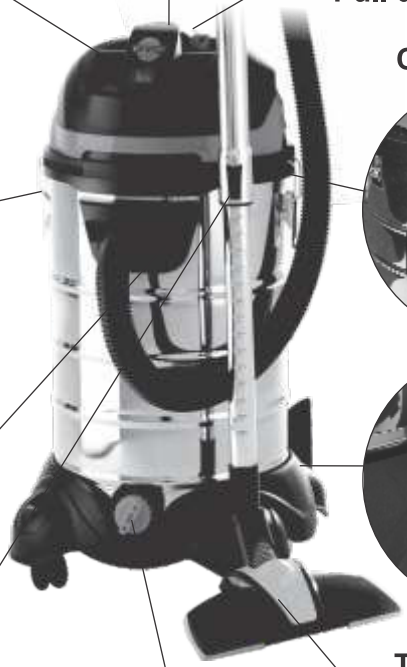


FLEXIBLE PIPE LOCK







ON-BOARD TOOL STORAGE

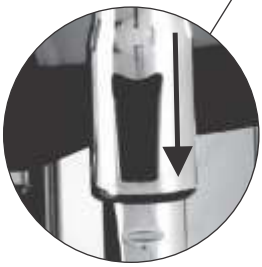

PIPE EXTENSION BUTTON

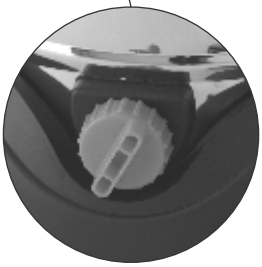

DRAIN PLUG

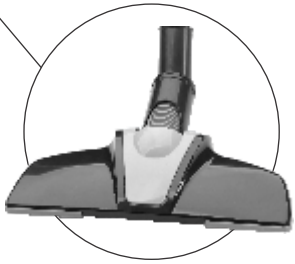

MULTI-FLOOR HEAD

BASIC OPERATION

PICTURES MAY VARY FROM ACTUAL PRODUCT.



MICRO-PARTICLE FILTER



DUST POCKET FILTER

Dry cleaning:
Ensure that both the dust pocket filter and the micro-particle filter is in place.

Wet cleaning:
Remove the dust pocket filter and the micro-particle filter before doing wet cleaning. Wet filters easily become clogged and will lead to reduced suction power. If the filters got wet during the cleaning process or after washing the filters, let it dry completely (recommended 24 hours) before replacing. Replacing a wet filter will attract dust and clog very quickly which could lead to requiring a replacement filter.

If you notice a drop of suction power during the vacuum process:
The Genesis Duravac Commercial is fitted with a unique filter cleaning system to ensure that you can easily keep the filter cleaner for longer and maintain suction power. When you notice a drop in suction power, switch off the machine. Locate the dust release button at the back of the vacuum (on the blower side). Push the button down and release 3-5 times. The correct action for this function is to release it completely from the bottom to shoot up by itself and not be guided back to the top by hand. Check the suction power and repeat if necessary. If this function does not deliver the required results, the filter may need manual cleaning or replacement.


DUST RELEASE BUTTON



Pull down and release


WATER OVERFILL PROTECTION

The Genesis is fitted with a special float system. As the water level rises, so too will the float. When it reaches the top level, the float will close off the suction power from the motor preventing more water being sucked up. When you notice a sudden drop in suction and more motor noise, this would indicate that the float has blocked off the suction. Empty the tank immediately before continuing vacuuming. If the vacuum falls over by accident, the float may also activate. Switch off the vacuum and turn it the right way up again before switching on again.

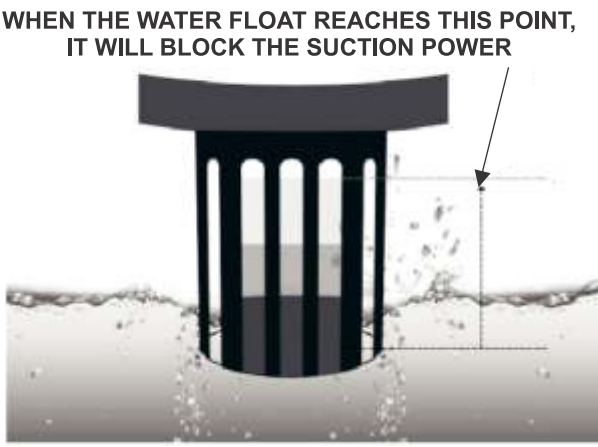

NB: If you notice a drop in suction power even after cleaning the filters, please check the black filter inside the float system. This filter may become clogged if the machine is used without the Micro-particle filter or with it installed incorrectly.

WATER OVERFILL PROTECTION

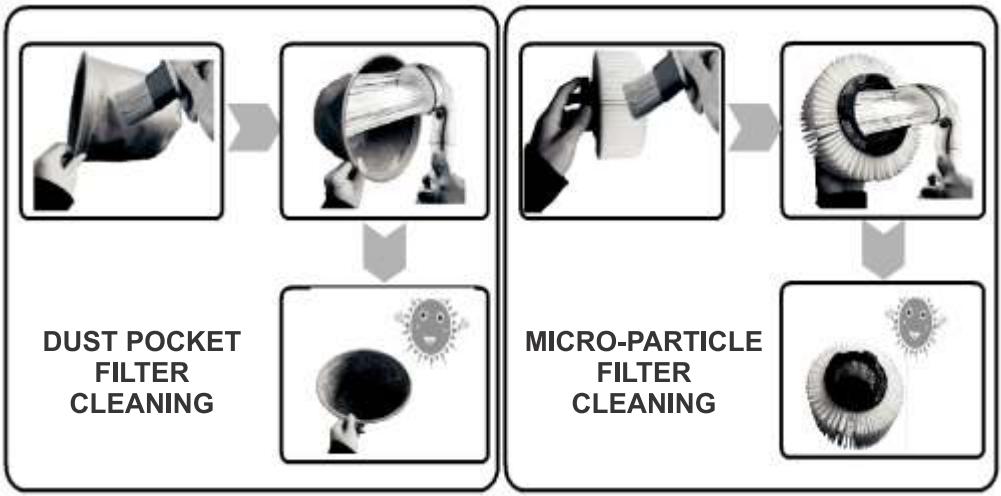

Always switch off the vacuum and unplug before doing any cleaning/maintenance.
1. DRY CLEANING: First tap the filters on a hard surface to tap out dust. A brush can also be used to remove excess dust. This step can be done regularly as required.
2. WET CLEANING: Rinse under clean tap water only. (Never use chemicals or machine wash). Allow to dry completely before replacing. (Recommended 24 hours).

TROUBLESHOOTING

Problem	Possible reasons	Solution
The vacuum does not work	1. The power plug has not been inserted correctly. 2. The electrical socket is off.	1. Re-insert the plug into the socket correctly. 2. Ensure that the power is switched on.
Reduction in suction	1. Vacuum hose or the telescopic tube may be blocked. 2. The vacuum filter is blocked 3. The vacuum head may not be placed correctly onto the tank. 4. Suction regulator on the hose may be open.	1. Clean the obstructions in the hose and/or the tube. 2. Clean up or replace the filter. 3. Remove the head completely. Line up the switch with the vacuum intake on the tank. Make sure the side clips are clicked securely. 4.Ensure that the suction regulator is closed for maximum vacuum power.
Louder than normal noise	1. The filter(s) may be blocked, restricting the airflow. 2. Vacuum hose or the telescopic tube may be blocked. 3. The suction float for protecting the vacuum against too much water being vacuumed, may have activated.	1. Clean up or replace the filter. 2. Clean the obstructions in the hose and/or the tube. 3. Empty the water/liquid from the tank immediately. If there is not a lot of water, switch the vacuum off to let the float drop.

If none of the above solutions solve the problems you are experiencing, please take the vacuum to a service center. Do not repair it yourself.

GUARANTEE

This appliance is guaranteed to be free from material or manufacturing defects for a period of 2 years from date of purchase. In case a manufacturing or material defect occurs, we will gladly repair the item free of charge, provided the item is returned with the corresponding proof of purchase.

The guarantee will be void if;

- The defect in the machine was caused by inappropriate use, over-loading or used in any way other than the appropriate operation methods described in this manual.
- If there has been any technical interference, modification or service done by an unauthorized service person.
- If the item has been opened by the customer.
- If the item has been dropped.
- If no proof of purchase can be produced at the time of the claim.

Refunds

No refunds will be granted on this machine;

- After 15 days from purchase date
- If no proof of purchase can be produced
- If the machine is not in its original condition
- If the machine is not returned complete with all the parts as sold
- If the machine has not been used in accordance with this manual
- If the machine is not returned with the original packaging
- If the machine is scratched or damaged by the customer in any way
- If consumables were used by the customer and there is no reasonable proof that a manufacturing or material defect in the machine, the customer should pay for the used consumables.



POWERFUL BLOWER



EASY-DRAIN FEATURE



ONE BUTTON FILTER CLEANING

ATTACHMENTS



1. High efficiency brush
2. Brush attachment
3. Long crevice tool
4. 10m Cord
5. S/S Telescopic pipe
6. Wet cleaning attachment
7. Extra large dust filter

VERIMARK

The ideal commercial size wet & dry vacuum now with unique anti-clog filter system

Manufactured for and distributed by:
Verimark (Pty) Ltd
P.O. Box 78260, Sandton, 2146
Tel: 0860 005 005
www.verimark.co.za