GENESIS

VERIMARK

65dB 14L

SILENTVAC

SUPER SILENT VACUUM
NOISE AS LOW AS ONLY 65dB!

QUALITY 1 YEAR GUARANTEE

QUALITY SINCE 1977 INNOVATIONS



Model: ZD178

Instruction manual

WARNING To prevent accidents and/or machine damage, read these instructions before use.

RETAIN FOR FUTURE REFERENCE

SAFETY AND OPERATIONAL INSTRUCTIONS

When you use an electrical appliance, basic precautions should always be followed, including the following;

READ ALL THE INSTRUCTIONS BEFORE USING THIS VACUUM CLEANER

WARNING - To reduce the risk of fire, electric shock or injury:

- Do not leave the appliance when plugged in. Unplug from the outlets when not in use and before maintenance/servicing.
- Ensure that the voltage indicated on the appliance's rating plate matches the local power supply voltage before connecting it.
- This is a dry vacuum only. Do not use outdoors or on wet surfaces. Never suck up any liquids.
- Children should be supervised to ensure that they do not play with the appliance.
- This appliance is not intended for use by individuals (including children) with reduced sensory perception, physical limitations, or lack of experience and knowledge unless they are under supervision or have received instruction on its safe use from a responsible person. Users must be fully capable of understanding the operational and safety guidelines.
- Use only as described in the manual. Use only the manufacturers recommended attachments.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified person in order to avoid a hazard.
- Do not pull or carry by the cord, use the cord as a handle, close a door on the cord or pull the cord around sharp edges or surfaces which may cause damage to the cord. Do not run the vacuum over the cord. Keep the cord away from heated surfaces.
- Do not unplug by pulling on the cord. To unplug, grasp the plug, not the cord.
- Do not handle the product with wet hands.
- Do not place any objects in any openings on the vacuum motor head and keep these openings free of dust, lint, hair or anything which may reduce the airflow.
- Keep hair, loose clothing, fingers and all body parts away from openings and moving parts.
- Do not pick up anything that is burning or smoking such as cigarettes, matches or hot ashes.
- Do not use without dust cover filter and/or clean filter in place.
- Turn off the machine before unplugging.
- Do not pick up flammable or combustible liquids such as gasoline or use in areas where it may be present.


Product specs:

Model number: ZD178
Rated voltage: 220-240V
Rated frequency: 50Hz
Rated input: 1000W
Noise level: 65dB

Product features:

1. Dry vacuum cleaner
2. Overheat protection
3. Reduces noise pollution
4. High efficiency motor
5. Reusable, washable filters

PARTS DESCRIPTION

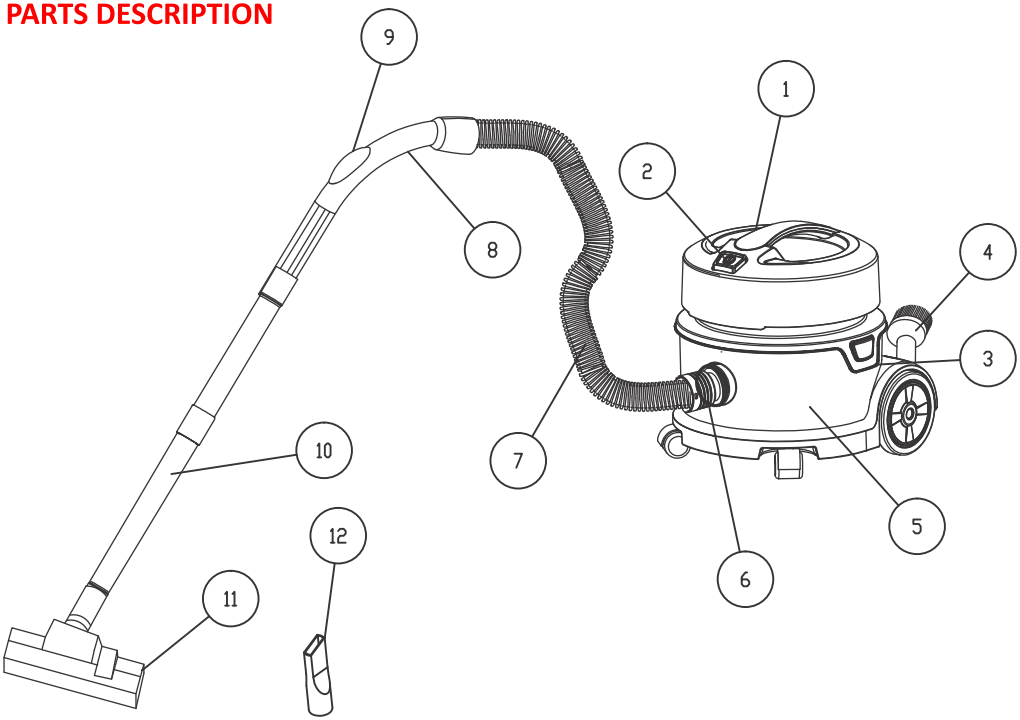


1. Handle
2. ON/OFF switch
3. Dust tank clips
4. Round brush
5. Dust tank
6. Suction hose connection
7. Flexible hose
8. Handle
9. Suction control knob
10. Extendable pipe
11. High efficiency brush
12. Crevice Nozzle

IMPORTANT SAFETY PRECAUTIONS

⚠ DANGEROUS

1. Never use the appliance near flammable liquids or explosive gasses.
2. Always turn off the power before inserting/removing the plug from the wall socket.
3. Do not touch the appliance or the plug with wet hands.

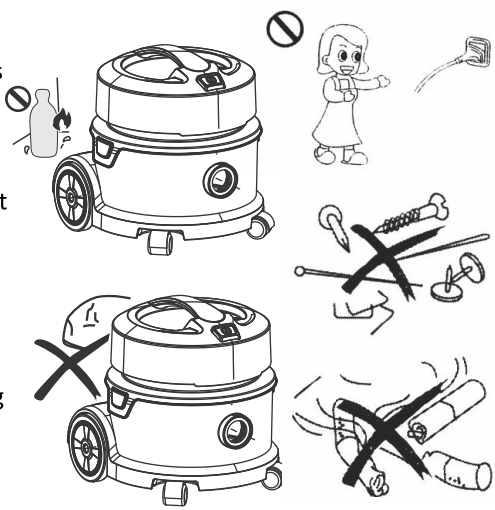


⚠ WARNING


4. Do not block any vents as this will cause the appliance to overheat and cause damage to it.
5. Do not vacuum up any of the following; burning cigarettes, coal, oil, kerosene and any other flammable, explosive or volatile materials.
6. Do not vacuum sharp objects.

IMPORTANT SAFETY PRECAUTIONS


Do not use the appliance to vacuum ash, fine powdery sand, dry cement and cement dust or similar substances as the pores of the bag and micro-particle filter will become blocked and cause damage to the machine.

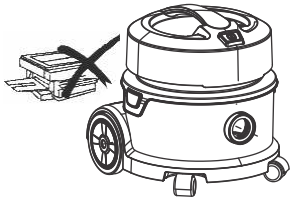

Static electricity may appear on the machine or attachments during operation - especially when using on thick-pile carpets. This is normal.

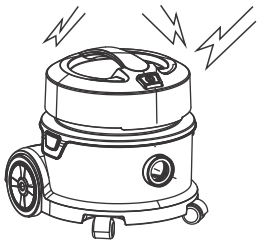


Do not allow the machine to overturn.

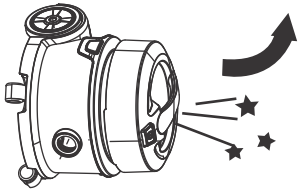

Turn the machine off and unplug it before doing any inspection or maintenance.

To avoid damage or discolouration of the plastic parts, do not expose the appliance to direct sunlight or high temperatures.

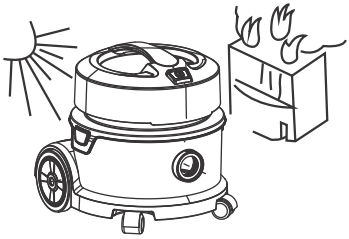

Do not bend or stretch the flexible hose as it may cause permanent damage or deformation. Do not immerse the vacuum head in any liquids as it will cause permanent damage to the electrical parts and may lead to electrocution. Only ever clean the motor head gently with a soft damp cloth.


CONNECTING THE PARTS

A: Connecting the flexible hose to the vacuum cleaner


To insert: Insert the hose connector into the suction nozzle on the tank and turn 90 degrees clockwise to lock into place.


To remove: Turn the hose connector 90 degrees counter-clockwise to unlock and then remove from the tank.

B: Insert the curved handle into the extension pipe and the multi-floor attachment into the bottom of the extension pipe.

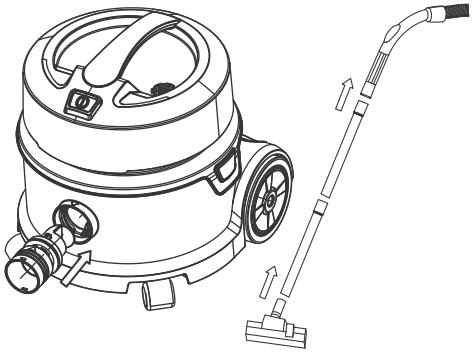

You may use the tools directly on the curved handle by pushing it securely onto the handle.

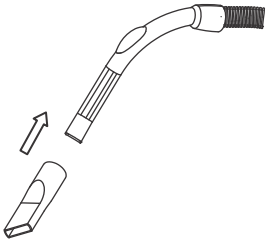

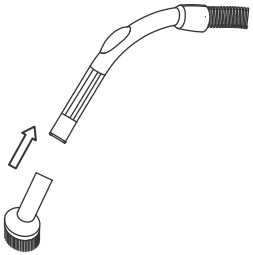



HOW TO USE

A. Switching the vacuum on and off

1. Insert the plug into the electrical outlet.
2. Press the power button to start the vacuum cleaner.
3. Press the power button again to stop the vacuum motor.

Make sure the switch on the vacuum cleaner is off before switching off and removing the plug from the wall socket.

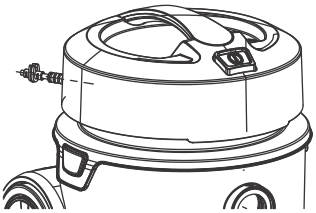

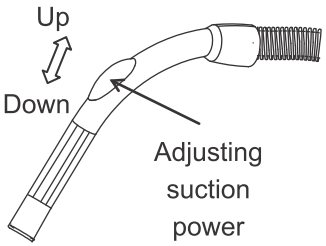

B: Adjusting the suction power


By moving the suction adjustment knob on the curved handle, suction power may be increased/decreased depending on your needs. When it is open, the suction power will be lower and when it is completely closed, the suction power would be at its highest.

ACCESSORY USES

The brush attachment is used to prevent scratching on delicate areas.

The crevice nozzle is used in hard to reach areas and gaps.




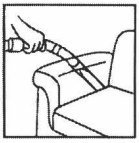


INSTALLING THE BAG

1. Install the bag


Please always use the vacuum cleaner with the bag installed - never without.

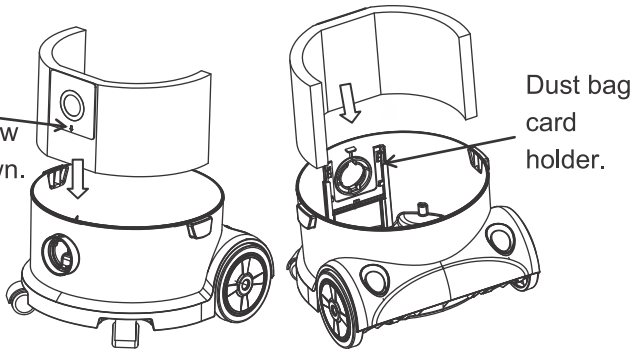



2. Place the motor head on the dust tank
Align the ON/OFF switch and the suction inlet on the tank. Push the head down making sure that the 2 side clips securely squeeze into place.

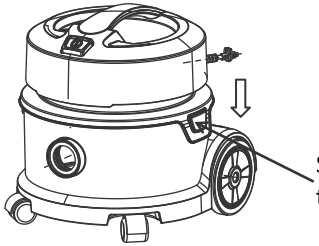

3. Insert the hose connector assembly
3.1 Align the flexible hose connector to the suction inlet on the tank. Make sure that the indicating arrows align.
3.2 Rotate the flexible hose connector clockwise by 90 degrees to tighten.
3.3 Rotate the flexible hose connector counter-clockwise by 90 degrees if the hose needs to be removed. You need to remove the hose first before removing the bag.

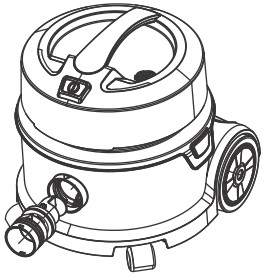


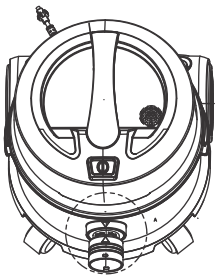

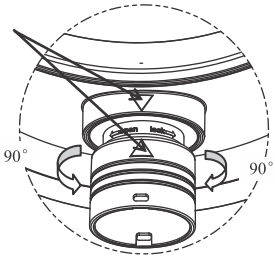


4. Starting to vacuum
Insert the plug into the electrical socket and switch the vacuum on by pressing the button on top of the motor head.

5. Removing the motor head from the tank
Hold the buckles on both sides of the motor head.
Pull gently away from the tank and lift up.

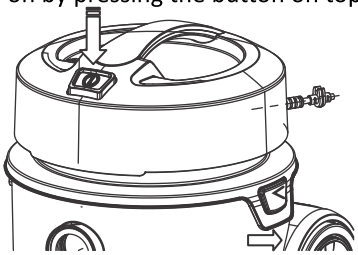


MICRO-PARTICLE FILTER MAINTENANCE

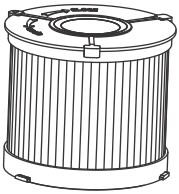

Micro-Particle Filter Cleaning: Always use the dust bag to reduce how often the Micro-particle filter needs to be cleaned and to extend its service life. Clean the Micro-particle filter regularly. It can be cleaned using compressed air or by gently tapping it to remove dust. This vacuum cleaner is for dry use only. If it is accidentally used to absorb water and the Micro-particle filter becomes damp, allow the filter to dry completely in the sun before reuse. If the Micro-particle filter is severely clogged and cannot be cleaned, please replace it with a new Micro-particle filter in a timely manner.
Dust Container Cleaning: Please empty and clean the dust container regularly. Wash it with clean water and allow it to air-dry completely. Do not expose it to direct sunlight, as this may accelerate aging of plastic parts. (Please remove the dust bag before cleaning the dust container.)
Dust Bag Cleaning: A dirty dust bag must be emptied first (remove the clips on both sides of the dust bag), then thoroughly cleaned using clean warm water. If necessary, use a neutral detergent. Allow it to dry completely before reuse. (Please reattach the dust bag clips after cleaning.)

PROTECTION VALVE

When the valve makes an exhaling noise, it indicates that the filters are clogged, one of the pipes has an obstruction or one of the attachments have an obstruction. Please locate the issue and clean it immediately.

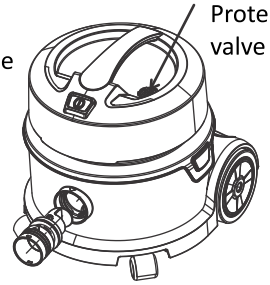

GUARANTEE

This appliance (excluding consumables and attachments) is guaranteed to be free from material or manufacturing defects for a period of 1 year from date of purchase. In case a manufacturing or material defect occurs, we will gladly repair the item free of charge, provided the item is returned with the corresponding proof of purchase. This guarantee excludes consumables like brushes, pads and attachments.

The guarantee will be void if;

- The defect in the machine was caused by inappropriate use, over-loading or used in any way other than the appropriate operation methods described in this manual.
- If there has been any technical interference, modification or service done by an unauthorized service person.
- If the item has been opened by the customer.
- If the item has been dropped.
- If the vacuum was used to suck up liquids of any nature. This is a dry-only vacuum cleaner.
- If no proof of purchase can be produced at the time of the claim.

REFUNDS

No refunds will be granted on this machine;

- After 15 days from purchase date.
- If no proof of purchase can be produced.
- If the machine is not in its original condition.
- If the machine is not returned complete with all the parts as sold.
- If the machine has not been used in accordance with this manual.
- If the machine is not returned with the original packaging.
- If the machine is scratched or damaged by the customer in any way.
- If consumables were used by the customer and there is no reasonable proof that a manufacturing or material defect in the machine, the customer should pay for the used consumables.

SERVICING OR REPAIRS

If the product malfunctions or is damaged, all inspections and repairs must be carried out by a qualified electrician or technician.



This appliance may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment.



Manufactured for and distributed by:
Verimark (Pty) Ltd
P.O. Box 78260, Sandton, 2146
Tel: 0860 005 005
www.verimark.co.za