Manufactured for and distributed by:
Verimark (Pty) Ltd
P.O Box 78260, Sandton, 2146
Tel 0860 005 005
www.verimark.co.za

INSTRUCTION MANUAL





AS SEEN ON TV

V-SSAGE

Total Body Massager

THE ULTIMATE TOOL FOR RELAXATION & RECOVERY

PRODUCT DESCRIPTION

The V-ssage Total Body Massager is a cordless state-of-the art vibration massage device that relaxes sore, stiff muscles. Increases circulation and range of motion and improves the overall health of body's soft tissue.

CORDLESS/RECHARGEABLE
16.8V Lithium-Ion Battery

LIGHTWEIGHT DESIGN
2.5lbS/1.1kg

We reserve the right to make revisions without notice in the design of products or in packaging without further notice.

ATTACHEMENTS

LARGE SPHERE




Suitable for large muscle tissue such as back and chest muscle groups.

SMALL SPHERE



Suitable for arm, thigh and calf muscles.

FORK HEAD

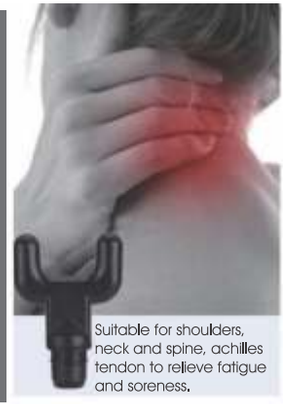


Suitable for shoulders, neck and spine, achilles tendon to relieve fatigue and soreness.

FLAT HEAD



Apply to all parts of the body to relax.

MUSHROOM HEAD

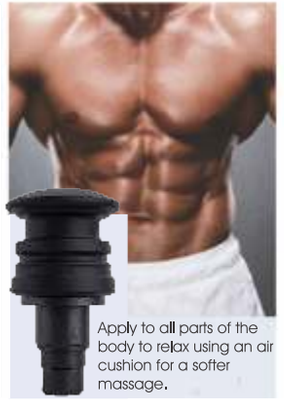

Apply to all parts of the body to relax using an air cushion for a softer massage.

BULLET HEAD



Suitable for deep tissues, such as acupuncture points, joints and limbs.

DISCLAIMER

PLEASE DO NOT USE THE TOTAL BODY MASSAGER WITHOUT FIRST OBTAINING APPROVAL FROM YOUR DOCTOR IF ANY OF THE FOLLOWING APPLY:

Pregnancy, diabetes with complications such as neuropathology or retinal damage, if you have a pacemaker, have had recent surgery, epilepsy or migraines or herniated disks.

If you have recently undergone spondylolisthesis, spondylolysis, have recent joint replacements or IUD's, metal pins or plates or any concerns about your physical health.

Frail individuals and children should be accompanied by and adult when using any vibrational device.

These contra indications do not mean that you are not able to use a vibration or exercise device, but we advise that you consult your doctor first. Ongoing research is being done relating to the effects of vibration exercise for specific medical disorders. This will likely result in the shortening of the list of contra indications as written above. Practical experience has shown that integration of vibration exercise into a treatment plan is advisable in a number of cases. This must be done under the recommendation of a professional or under medical supervision.

GUARANTEE

If within 1 year from the date of purchase this product fails due to a defect in material or workmanship, we will repair or replace the product or necessary components free of charge.

THIS GUARANTEE EXCLUDES:
A. Damage caused by accident, abuse, mishandling, misuse or transport.
B. Repair of the unit without permission.
C. Deterioration of the delivered product resulting from abnormal storage and/or safeguarding conditions on the clients premises.
D. Failure to provide dated proof of purchase documents.

WARNINGS & PRECAUTIONS

1. Do not submerge the device in water. Keep away from liquid and heat sources. Keep ventilation ports free from debris or dust.
2. Do not remove screws or attempt to dismantle.
3. Do not operate continuously for more than 1 hour. Allow device to rest for at least 30 minutes between uses.
4. Unplug the charger from the device after charging and prior to use.
5. For adult use only. Do not use if you are injured. Consult your doctor before using this product.

SPECIFICATIONS

1. ON/OFF power switch
2. 4 Speed settings for optimal pressure
3. Rechargeable Lithium-Ion battery (non-removable)
4. High torque brushless motor
5. Battery indicator.

The battery indicator light will change colour depending on your battery level:

GREEN: suggests optimal battery capacity
YELLOW: indicates a low battery level
RED: indicates very little to no power, please place unit on charge.

NB. PLEASE ENSURE THAT THE POWER SWITCH IS TURNED OFF WHILE CHARGING

VIBRATION FREQUENCY

Level 1: 30HZ – 30 vibrations per second
Level 2: 40HZ – 40 vibrations per second
Level 3: 45HZ – 45 vibrations per second
Level 4: 50HZ – 50 vibrations per second

WEIGHT

2.5lbs / 1.1kg

CHARGE

240V 60HZ
16.8V 1.0A





USAGE INSTRUCTIONS

PLEASE READ PRIOR TO USE

CHARGING

1. Fully charge battery for up to 4 hours before first use.

2. To charge: Connect DC end of the supplied 16.8V adaptor into the battery's charging port and plug the AC side into a wall power outlet.

3. LED lights on battery pulsate to show battery level and to indicate active charging.

4. Full charge is indicated when LED lights stop flashing and remain fully lit.

5. Battery may be recharged at any time and at any battery level.

6. It is not recommended to fully deplete the battery to the red LED level.

7. The average run-time is 4 hours+ depending on the speed level and pressure applied during use.

OPERATING THE UNIT

1. Power on the device using the power switch located underneath the handle grip.

2. With power switch ON, press once to turn the device to level 1, twice of level 2, thrice for level 3 and four times for level 4. The LED lights will indicate the power level.

3. Massage desired body part at the chosen speed applying pressure as required.

4. Power device OFF and store.

MAINTENANCE, CLEANING AND STORAGE

1. Use a slightly damp cloth to wipe the device and then dry with a clean soft cloth and store away in carry case.

DISCLAIMER

SAFETY INSTRUCTIONS

DANGER: TO REDUCE RISK OF ELECTRIC SHOCK, FIRE AND PERSONAL INJURY THIS PRODUCT MUST BE USED IN ACCORDANCE TO THE FOLLOWING INSTRUCTIONS:

1. Use over clothing, on a clean dry surface of the body with light pressure moving across the body for approximately 60 seconds per area. Use only on soft body tissue as desired without producing pain or discomfort.
2. Do not use on your head or on any other bones - only use where muscles are present.
3. Use only the applicators that provide the best desired effect. Bruising can occur regardless of control setting or pressure applied. Check treated areas frequently and immediately stop use at any signs of pain or discomfort.
4. Keep fingers, hair and other body parts away from the shaft and back side of the device as pinching may occur.
5. Do not place any objects into the ventilation holes of the device.
6. Do not immerse in water or allow water to enter the ventilation holes.
7. Do not drop, misuse or tamper with the device in any way.
8. Only recharge the device with the supplied 16.8V charger.
9. Carefully examine device and battery before each use and never leave the device unattended during operation or charging.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.



IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH EC DIRECTIVE 2002/96/EC
At the end of its working life, the product must not be disposed of as urban waste.
It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service.
Disposing of a household appliance separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal and enables the constituent material to be recovered to obtain significant saving in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.